


Accessories for Lubrication

Grease Nipple

THK provides various types of grease nipples needed for the lubrication of LM systems.


A-MT6×1 (MT6×1)

A-M6F (M6×0.75)

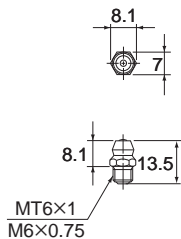


B-MT6×1 (MT6×1)

B-M6F (M6×0.75)

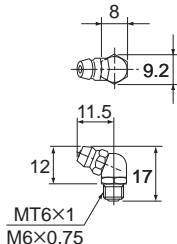


C-MT6×1 (MT6×1)


C-M6F (M6×0.75)

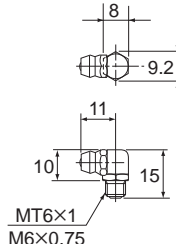


A-PT1/8

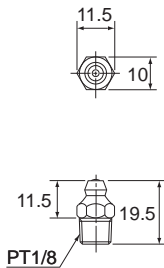


B-PT1/8

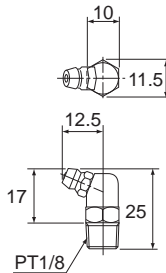


C-PT1/8

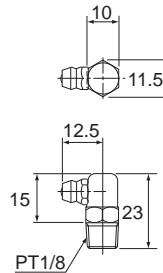


PB107

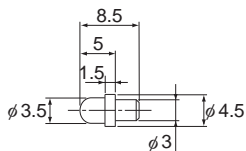


NP3.2×3.5

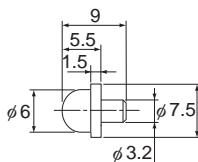


PB1021B

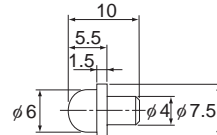

NP6×5

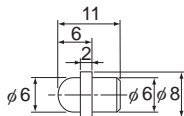

NP8×9

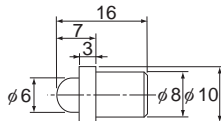

Note) Do not tighten or loosen any installed grease nipple, as this may cause it to not function properly.