

## **Model Number**

NJ50-FP-N-P1

## **Features**


• 50 mm non-flush

Technical Data		
General specifications		
Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	Sn	50 mm
Installation		non-flush
Assured operating distance	Sa	0 40.5 mm
Reduction factor r <sub>Al</sub>		0.4
Reduction factor r <sub>Cu</sub>		0.3
Reduction factor r <sub>304</sub>		0.85
Nominal ratings		
Nominal voltage	U <sub>o</sub>	8.2 V (R <sub>i</sub> approx. 1 kΩ)
Switching frequency	f	0 100 Hz
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤1 mA
Functional safety related parameter	ers	
MTTFd		11400 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Mechanical specifications		
Connection type		screw terminals
Core cross-section		up to 2.5 mm <sup>2</sup>
Housing material		PBT
Sensing face		PBT
Degree of protection		IP67
General information		
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and d	rective	s
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007
Approvals and certificates		
UL approval		cULus Listed, General Purpo
CCA approval		aCEAua Listed Constal Bur

- CSA approval CCC approval

neral Purpose cCSAus Listed, General Purpose CCC approval / marking not required for products rated ≤36 V

## Dimensions

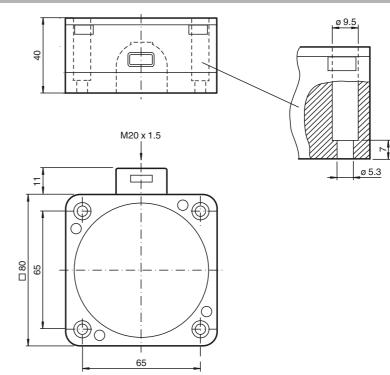




Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



## **Electrical Connection**

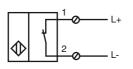

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

Equipment protection level Ga	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1G EC-Type Examination Certificate	for use in hazardous areas with gas, vapour and mist PTB 00 ATEX 2032 X
CE marking	<b>CE</b> 0102
ATEX marking	$\bigotimes$ II 1G Ex ia IIC T6T1 Ga The Ex-related marking can also be printed on the enclosed label.
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NJ 50-FP-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 320 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 360 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EC and there- fore the EC-type-examination certificates generally apply only to the use of electrical apparatus under atmospheric conditions. The device has been checked for suitabil- ity for use at ambient temperatures of > 60 °C by the named certification authority. The surface temperature of the device remains within the required limits. If the equip- ment is not used under atmospheric conditions, a reduction of the permissible mini- mum ignition energies may have to be taken into consideration.
Ambient temperature	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate. <b>Note:</b> Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127- 1 has already been applied to the temperature table for category 1.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met. If the Exrelated marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion. After opening the housing, you should check that the seal is in the correct position and is clean and intact before closing the housing again.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Non-permissible electrostatic charges should be avoided on the plastic housing parts. Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1. Avoid electrostatic charges that can cause electrostatic discharge when installing or operating the device.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com





Equipment protection level Gb	
Instruction	Manual electrical apparatus for hazardous areas
Device category 2G	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 00 ATEX 2032 X
CE marking	€€0102
ATEX marking	$\langle \widehat{\mathbf{x}} \rangle$ II 1G Ex ia IIC T6T1 Ga The Ex-related marking can also be printed on the enclosed label.
Standards	EN 60079-0:2012+A11:2013, EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NJ 50-FP-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 320 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 360 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EC and there- fore the EC-type-examination certificates generally apply only to the use of electrical apparatus under atmospheric conditions. The device has been checked for suitabil- ity for use at ambient temperatures of > 60 °C by the named certification authority. The surface temperature of the device remains within the required limits. If the equip- ment is not used under atmospheric conditions, a reduction of the permissible mini- mum ignition energies may have to be taken into consideration.
Maximum permissible ambient temperature $T_{amb}$	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion. After opening the housing, you should check that the seal is in the correct position and is clean and intact before closing the housing again.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 $^{\circ}$ C to -20 $^{\circ}$ C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Additional requirements for gas group IIC. Avoid electrostatic charges that can cause electrostatic discharge when installing or operating the device. Information on elec- trostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

PEPPERL+FUCHS

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Equipment protection level Da	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1D	for use in hazardous areas with combustible dust
EC-Type Examination Certificate	PTB 00 ATEX 2032 X
CE marking	€0102
ATEX marking	II 1D Ex ia IIIC T135°C Da The Ex-related marking can also be printed on the enclosed label.
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated condi- tions
Appropriate type	NJ 50-FP-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 320 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 360 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The special conditions must be adhered to! The ATEX directive and there- fore the EU-type examination certificates are in general only applicable to the use of electrical apparatus operating at atmospheric conditions. The use in ambient temperatures of $>$ 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Permissible ambient temperature range	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the surface temperature, and the effective internal reactance values can be found on the EC-type-examination certificate. The maxi- mum permissible ambient temperature of the data sheet must be noted, in addition, the lower of the two values must be maintained.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appro- priate related apparatus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the imme- diate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion. After opening the housing, you should check that the seal is in the correct position and is clean and intact before closing the housing again.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible. After opening the housing, you should check that the seal is in the correct position and is clean and intact before closing the housing again.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Avoid electrostatic charges that can cause electrostatic discharge when installing or operating the device. Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1. Do not attach the nameplate provided in areas where electrostatic charge can build up.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

